


INSTALLATION INSTRUCTIONS

AUXILIARY HEAT SINK Baldor Catalog No. BC143


Use with BC140, BC140-FBR, BC141, BC142, BC142-6 and BC204 models to extend maximum horsepower ratings as follows:

Models Covered		Maximum Horsepower Ratings (HP (kw))	
		Without Auxiliary Heat Sink	With Auxiliary Heat Sink
BC140 and BC140-FBR*	Set for 115 VAC	3/4 (.6)	1 (.75)
	Set for 208/230 VAC	1½ (1.13)	2 (1.5)
BC141		3/4 (.6)	1½ (1.13)
BC142 and BC142-6		1½ (1.13)	3 (2.25)
BC204**	Set for 115 VAC	3/4 (.6)	1½ (1.13)
	Set for 208/230 VAC	1½ (1.13)	2 (1.5)

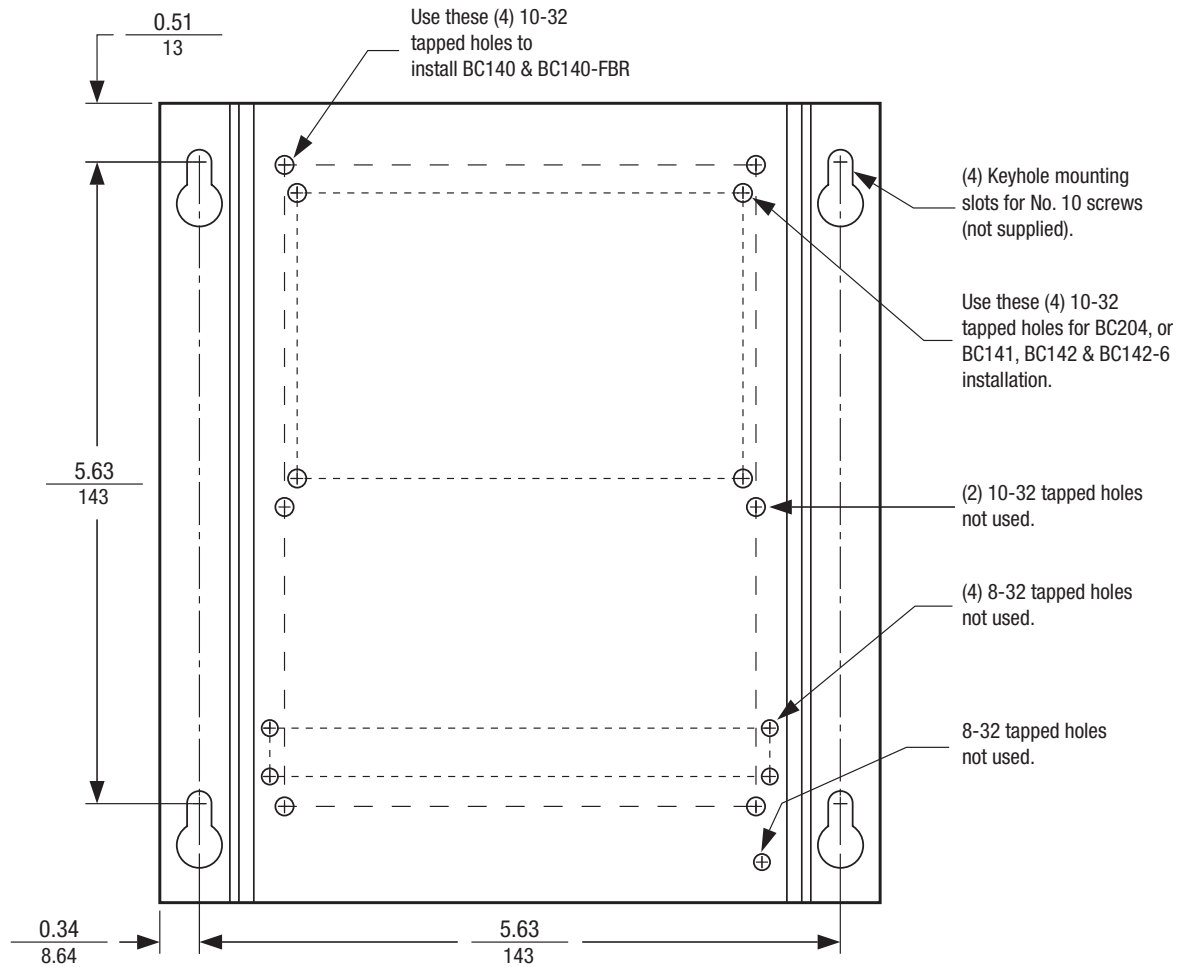

Notes: 1. Always mount heat sink in vertical position (if possible) to achieve maximum efficiency.
 2. (4) 10-32 screws are provided. 3. Install with keyhole slots in position as shown.

*BC140 and BC140-FBR contain a dual voltage switch which must be set to the proper AC line input voltage (115 or 230). **Model BC204 contains two AC line input voltage selection jumpers (J1A and J1B) which must be set to the proper AC line input voltage (115 or 230).

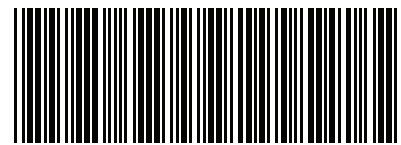

* 1 3 7 1 - 0 8 0 5 *



Baldor Electric Company
 P.O. Box 2400, Ft. Smith, AR 72902-2400
 (479) 646-4711 • Fax (479) 648-5792

MN1371
 (A40094) – Rev. B – 8/2005
 Print Code