

XTPAXUTS



Shroud for Unused Terminals of Three-Phase Commoning Links

| For Use with... | Description | Pkg. Qty. ① | Catalog Number |
|-----------------|--|-------------|-----------------|
| Frame B XTPR | To cover unused terminals on three-phase commoning link. Protected against direct contact. | 20 | XTPAXUTS |

XTPAXIT



Incoming Terminals for Three-Phase Commoning Link ②

| For Use with... | Pkg. Qty. ① | Catalog Number |
|--------------------|-------------|----------------|
| Frame B XTPR, XTPB | 5 | XTPAXIT |

Line-Side Adapters ③

XTPAXLSA



| For Use with... | Catalog Number |
|---|-----------------|
| Frame B XTPR to create a UL 508 Type E/F manual combination starter | XTPAXLSA |

XTPAXLSAD



| For Use with... | Catalog Number |
|---|--------------------|
| Frame D XTPR to create a UL 508 Type E/F manual combination starter | XTPAXLSAD ④ |

XTPAXIP2X




| | |
|--|------------------|
| Reduced size Frame D XTPR to create a UL 508 Type E/F manual combination starter (not to be used with 3-phase commoning links) | XTPAXIP2X |
|--|------------------|

Combination Connection Kits


Non-Reversing Starters

XTPAXPCB

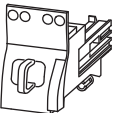


| For Use with... | Description/Comprised of ... | Std. Pack ① | Catalog Number |
|---------------------|---|-------------|-----------------|
| XTPR...B + XTCE...B | Mechanical connection element for XTPR...B and contactor | 1 | XTPAXPCB |
| | Main current wiring between XTPR...B and contactor in toolless plug connection | 1 | |
| | Use contactor auxiliary switch XTCEXFAT_. Control cable guidance: max. six cables up to 2.5 mm ² external diameter or four cables up to 3.5 mm ² external diameter. | | |

XTPAXEMC

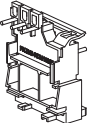

| | | | |
|---------------------|---|---|------------------|
| XTPR...B + XTCE...B | Mechanical and electrical connection for XTPR...B and contactor | 5 | XTPAXEMCB |
| XTPR...B + XTCE...C | | 5 | XTPAXEMCC |

XTPAXPCD

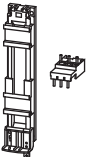

| | | | |
|---------------------|--|---|-----------------|
| XTPR...D + XTCE...D | DIN rail adapter plate Main current wiring between XTPR and contactor | 1 | XTPAXPCD |
|---------------------|--|---|-----------------|

Notes

- ① Orders must be placed in multiples of package quantity listed.
- ② For three-phase commoning link, protected against accidental contact, $U_b = 690V$, $I_b = 63A$;
For conductor cross-sections: 2.5–25 mm² stranded; 2.5–16 mm² flexible with ferrules, AWG 14-6.
- ③ XTPAXLSA is for three-phase commoning link, finger and back-of-hand proof,
 $U_b = 690V$, $I_b = 60A$ for conductor cross sections: 2.5–25 mm² stranded,
2.5–16 mm² flexible with ferrule, AWG 14-6.
- ④ XTPAXLSAD cannot be combined with three-phase commoning links. Conductor size 8 AWG–1/0.

XTPAXUTS



Shroud for Unused Terminals of Three-Phase Commoning Links

| For Use with... | Description | Pkg. Qty. ① | Catalog Number |
|-----------------|--|-------------|----------------|
| Frame B XTPR | To cover unused terminals on three-phase commoning link. Protected against direct contact. | 20 | XTPAXUTS |

XTPAXIT



Incoming Terminals for Three-Phase Commoning Link ②

| For Use with... | Pkg. Qty. ① | Catalog Number |
|--------------------|-------------|----------------|
| Frame B XTPR, XTPB | 5 | XTPAXIT |

Line-Side Adapters ③

XTPAXLSA



| For Use with... | Catalog Number |
|---|----------------|
| Frame B XTPR to create a UL 508 Type E/F manual combination starter | XTPAXLSA |

XTPAXLSAD



| For Use with... | Catalog Number |
|---|----------------|
| Frame D XTPR to create a UL 508 Type E/F manual combination starter | XTPAXLSAD ④ |

XTPAXIP2X




| | |
|--|-----------|
| Reduced size Frame D XTPR to create a UL 508 Type E/F manual combination starter (not to be used with 3-phase commoning links) | XTPAXIP2X |
|--|-----------|

Combination Connection Kits


Non-Reversing Starters

XTPAXTPCB

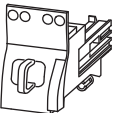


| For Use with... | Description/Comprised of ... | Std. Pack ① | Catalog Number |
|---------------------|---|-------------|----------------|
| XTPR...B + XTCE...B | Mechanical connection element for XTPR...B and contactor | 1 | XTPAXTPCB |
| | Main current wiring between XTPR...B and contactor in toolless plug connection | 1 | |
| | Use contactor auxiliary switch XTCEXFAT_. Control cable guidance: max. six cables up to 2.5 mm ² external diameter or four cables up to 3.5 mm ² external diameter. | | |

XTPAXEMC_

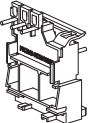

| | | | |
|---------------------|---|---|-----------|
| XTPR...B + XTCE...B | Mechanical and electrical connection for XTPR...B and contactor | 5 | XTPAXEMCB |
| XTPR...B + XTCE...C | | 5 | XTPAXEMCC |

XTPAXTPCD

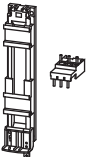

| | | | |
|---------------------|--|---|-----------|
| XTPR...D + XTCE...D | DIN rail adapter plate Main current wiring between XTPR and contactor | 1 | XTPAXTPCD |
|---------------------|--|---|-----------|

Notes

- ① Orders must be placed in multiples of package quantity listed.
- ② For three-phase commoning link, protected against accidental contact, $U_b = 690V$, $I_b = 63A$;
For conductor cross-sections: 2.5–25 mm² stranded; 2.5–16 mm² flexible with ferrules, AWG 14-6.
- ③ XTPAXLSA is for three-phase commoning link, finger and back-of-hand proof,
 $U_b = 690V$, $I_b = 60A$ for conductor cross sections: 2.5–25 mm² stranded,
2.5–16 mm² flexible with ferrule, AWG 14-6.
- ④ XTPAXLSAD cannot be combined with three-phase commoning links. Conductor size 8 AWG–1/0.