


Terminal control leads, blocks & lug kits



LK75-L



LK75-F

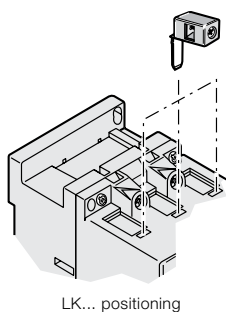

LK... positioning



ATK185



ATK750/3



LD75



LD110

Ordering details

For contactors	Catalog number
Right and left on A45 ... A75	LK75-L
Opposite on A45 ... A75	LK75-F
Right and left on A95 ... A110	LK110

Note: The LK... terminals provided for the A... contactors can be used for the AF, AE, AM, TAE, UA, GA and GAE types.

Terminal lug kits

For contactors	Wire		Tightening torque	Spare terminal hardware included [⊙]	Catalog number
	Range	Capacity	To conductor		
AF145...AF185 A145...A185	4 AWG...300 MCM	1	275 in.-lb	•	ATK185
					ATK185HK
AF210...AF300 A210...A300	4 AWG...400 MCM	1	375 in.-lb	•	ATK300
					ATK300HK
AF400...AF580	4 AWG...500 MCM	2	375 in.-lb	•	ATK300/2
					ATK300/2HK
AF580...AF750	2/0 AWG...500 MCM	2	275 in.-lb	•	ATK580/2
					ATK580/2HK
AF1350	2/0 AWG...500 MCM	3	375 in.-lb	•	ATK750/3
					ATK750/3HK
AF1350...AF1650	4/0 AWG...500 MCM	4	375 in.-lb	•	ATK1350/4
					ATK1350/4HK
AF1350...AF1650	1/0 AWG...750 MCM	4	500 in.-lb	•	ATK1650/4
					ATK1650/4HK
AF1350...AF1650	1/0 AWG...750 MCM	6	500 in.-lb	•	ATK1650/6
					ATK1650/6HK

Note: AF1250, AF2050 & AF2650 intended for busbar connection only. Terminal hardware supplied separately. Use of lug kits for AF1350 & AF1650 in general purpose applications reduces the ratings to 1050A and 1350A respectively. Recommend busbar connection for full ratings.

Spare terminal hardware kits

For contactors	Catalog number
A/F145...A/F185	LE185
A/F210...A/F300	LE300
AF400...AF460	LE460
AF580...AF750	LE750

Terminal blocks

For contactors	Catalog number
A45, A75	LD-75
A95, A110	LD-110

Note: The LD... terminal blocks provided for the A... contactors can be used for the AF, AL, AE, TAL, TAE and UA types.

⊙ Terminal hardware include with A(F)145...AF750 contactors; hardware for AF1350 & AF1650 available only with purchase of lug kit.


Terminal control leads, blocks & lug kits



LK75-L



LK75-F

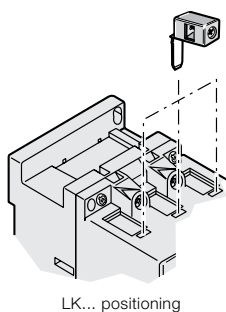

LK... positioning



ATK185



ATK750/3



LD75



LD110

Ordering details

For contactors	Catalog number
Right and left on A45 ... A75	LK75-L
Opposite on A45 ... A75	LK75-F
Right and left on A95 ... A110	LK110

Note: The LK... terminals provided for the A... contactors can be used for the AF, AE, AM, TAE, UA, GA and GAE types.

Terminal lug kits

For contactors	Wire		Tightening torque	Spare terminal hardware included [⊙]	Catalog number
	Range	Capacity	To conductor		
AF145...AF185 A145...A185	4 AWG...300 MCM	1	275 in.-lb	•	ATK185
					ATK185HK
AF210...AF300 A210...A300	4 AWG...400 MCM	1	375 in.-lb	•	ATK300
					ATK300HK
AF400...AF580	4 AWG...500 MCM	2	375 in.-lb	•	ATK300/2
					ATK300/2HK
AF580...AF750	2/0 AWG...500 MCM	2	275 in.-lb	•	ATK580/2
					ATK580/2HK
AF1350	2/0 AWG...500 MCM	3	375 in.-lb	•	ATK750/3
					ATK750/3HK
AF1350...AF1650	4/0 AWG...500 MCM	4	375 in.-lb	•	ATK1350/4
					ATK1350/4HK
AF1350...AF1650	1/0 AWG...750 MCM	4	500 in.-lb	•	ATK1650/4
					ATK1650/4HK
AF1350...AF1650	1/0 AWG...750 MCM	6	500 in.-lb	•	ATK1650/6
					ATK1650/6HK

Note: AF1250, AF2050 & AF2650 intended for busbar connection only. Terminal hardware supplied separately. Use of lug kits for AF1350 & AF1650 in general purpose applications reduces the ratings to 1050A and 1350A respectively. Recommend busbar connection for full ratings.

Spare terminal hardware kits

For contactors	Catalog number
A/F145...A/F185	LE185
A/F210...A/F300	LE300
AF400...AF460	LE460
AF580...AF750	LE750

Terminal blocks

For contactors	Catalog number
A45, A75	LD-75
A95, A110	LD-110

Note: The LD... terminal blocks provided for the A... contactors can be used for the AF, AL, AE, TAL, TAE and UA types.

⊙ Terminal hardware include with A(F)145...AF750 contactors; hardware for AF1350 & AF1650 available only with purchase of lug kit.